



GENIE SYSTEM 1 FRONT DOOR ANSWERING SYSTEM

-OPERATING INSTRUCTIONS

1. FRONT DOOR STATION

The front door station consists of a plate with an illuminated push button. When the button is depressed a call tone will be heard out of the Room Station.

2. ROOM STATION(s)

The Room Stations consist of a plate with 2 push buttons labelled as follows:-

TALK

LOCK

3. TALK

When pressed allows you to talk to the Front Door Station. When you release this button you will automatically be able to hear the person at the Front Door without having to press any buttons. A short period of time after the TALK button is released the Front Door Station will switch off.

4. LOCK

This button when pressed energizes the electric latch (if fitted-this is an optional extra) at the front door allowing people to enter. When this button is released the latch is de-energized returning to its normal state.

N.B. This system when installed of multiple Room Stations will not allow the user to communicate between the Room Stations.

****To avoid damaging the finish of the intercom plates do not use abrasive or harsh cleaning products.**





OPERATING INSTRUCTIONS

SYSTEM 1

FRONT DOOR ANSWERING SYSTEM

Installed System 1 comprises of the following equipment:

1. One Front Door Station .
2. One (or more) Room Station .
3. One Control unit.
4. One Low Voltage Plug Pack .
(Electronic Latch is optional extra).

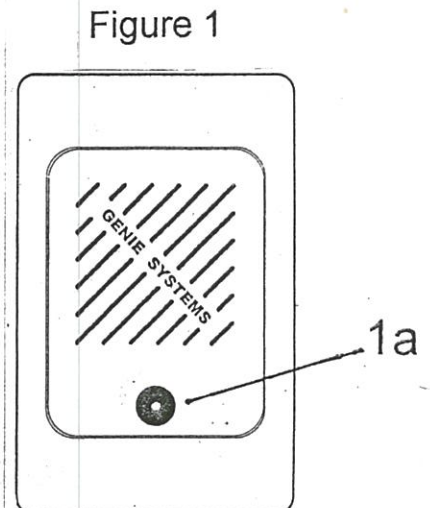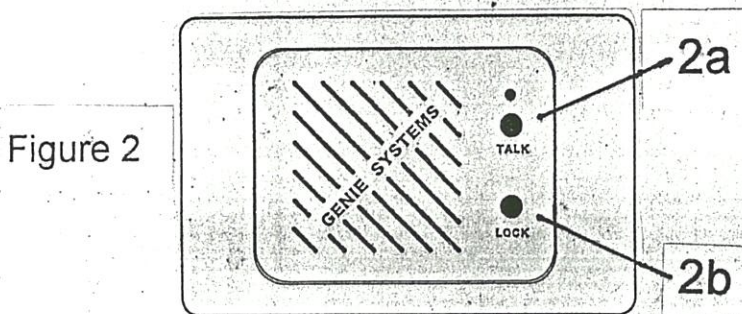

When a caller presses the illuminated push button(1a) on the front door station (Figure 1) the electronic chimes will be heard from the inside room station(s) (Figure 2)

To answer the caller the person inside presses the TALK button (2a) on the room station and speaks in a normal voice approximately 20 cm from the unit. The button must be pressed all the time whilst talking. When finished talking release the TALK button(2a) and listen to the caller. The caller speaks hands free back to the room station.

To unlock the front door(if electronic latch is fitted) press the LOCK (2b) button for 3-4 seconds.

When the conversation is complete the system will automatically go into standby mode.

The volume of both the chimes and speech can be adjusted on the control unit by the installer at the time of installation.

The equipment should only be cleaned with a damp cloth.
DO NOT USE CLEANING CHEMICALS OR SPRAYS as these may damage the units.